
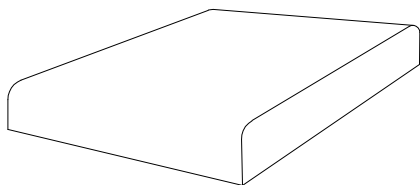


**SOFT
LINE**

WOOD


Design: Jakob Schenk

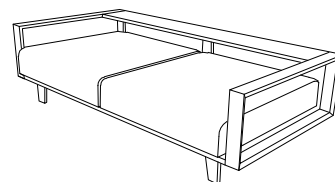

A x 2



B x 8



C x 8



D x 8



E x 10



F x 8




G x 9




H x 4




i x 4



J x 2_right



K x 2_left




L x 4




M x 16




N x 4




O x 1

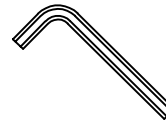


P x 1

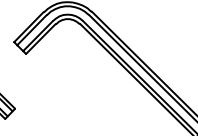

Q x 1

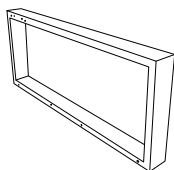

R x 1_Right

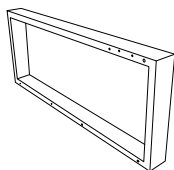

S x 1_left




T x 1




U x 2_right




V x 2_left

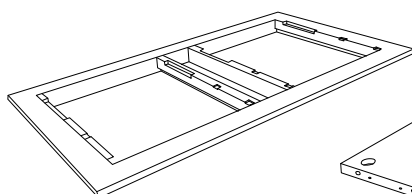

X x 1

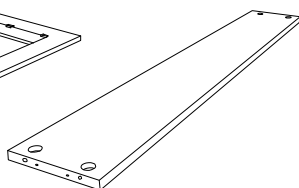


Y x 1

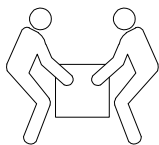


1.



2 x


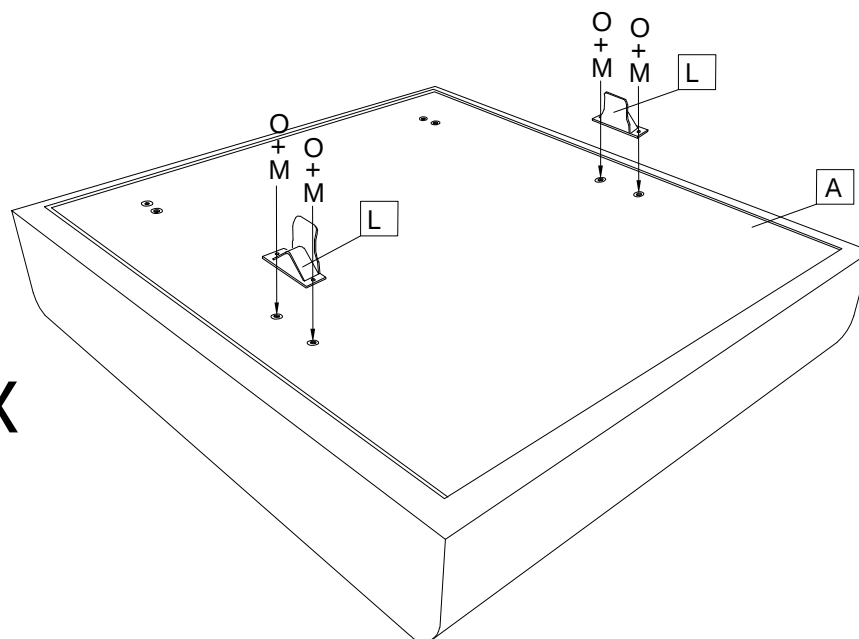



2.

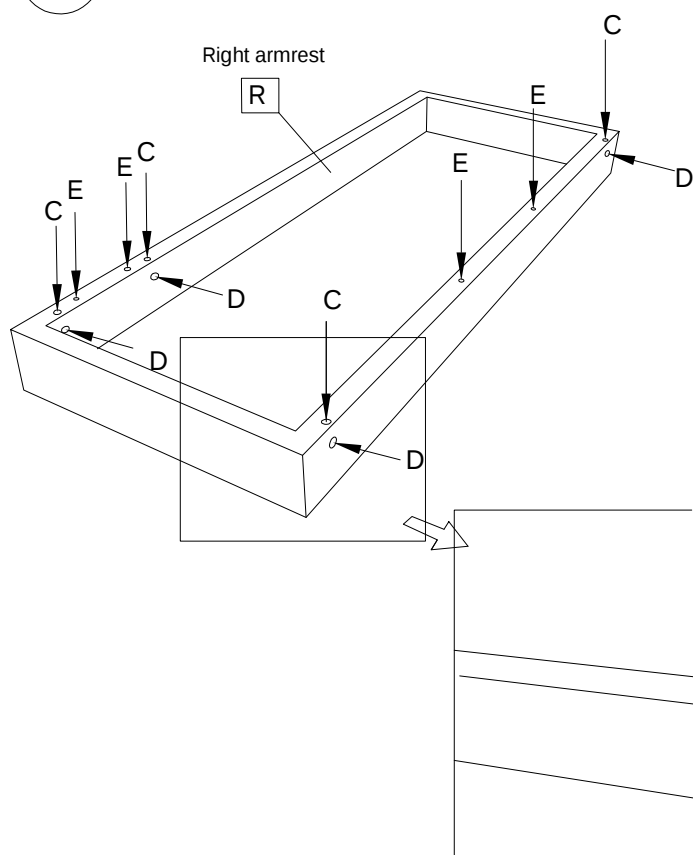

3.

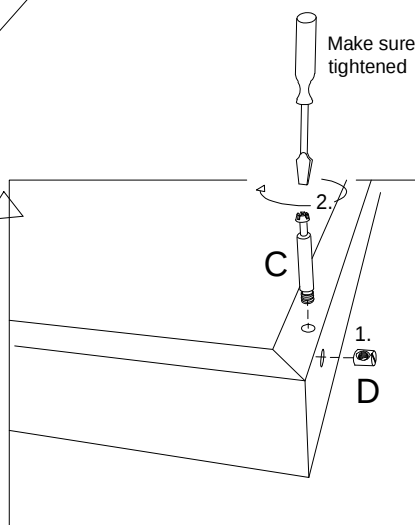
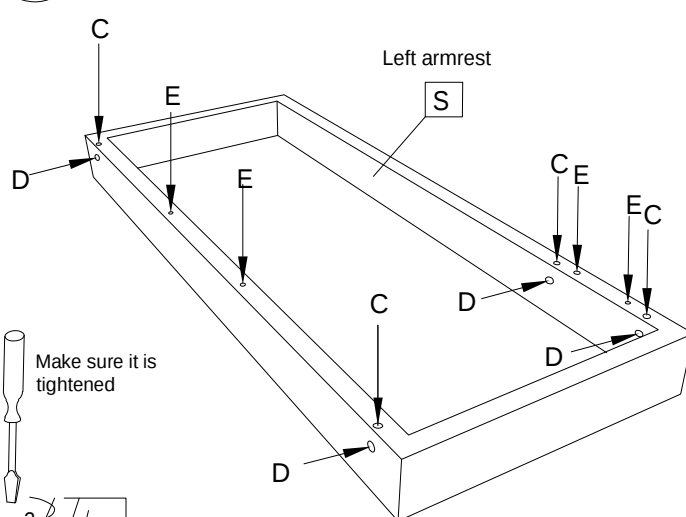


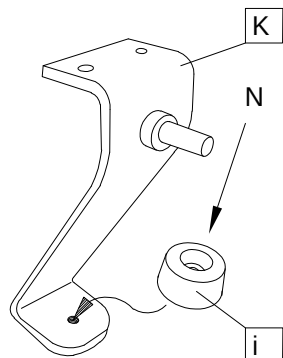


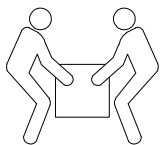


6.

Typical procedure for
mounting of 'B'

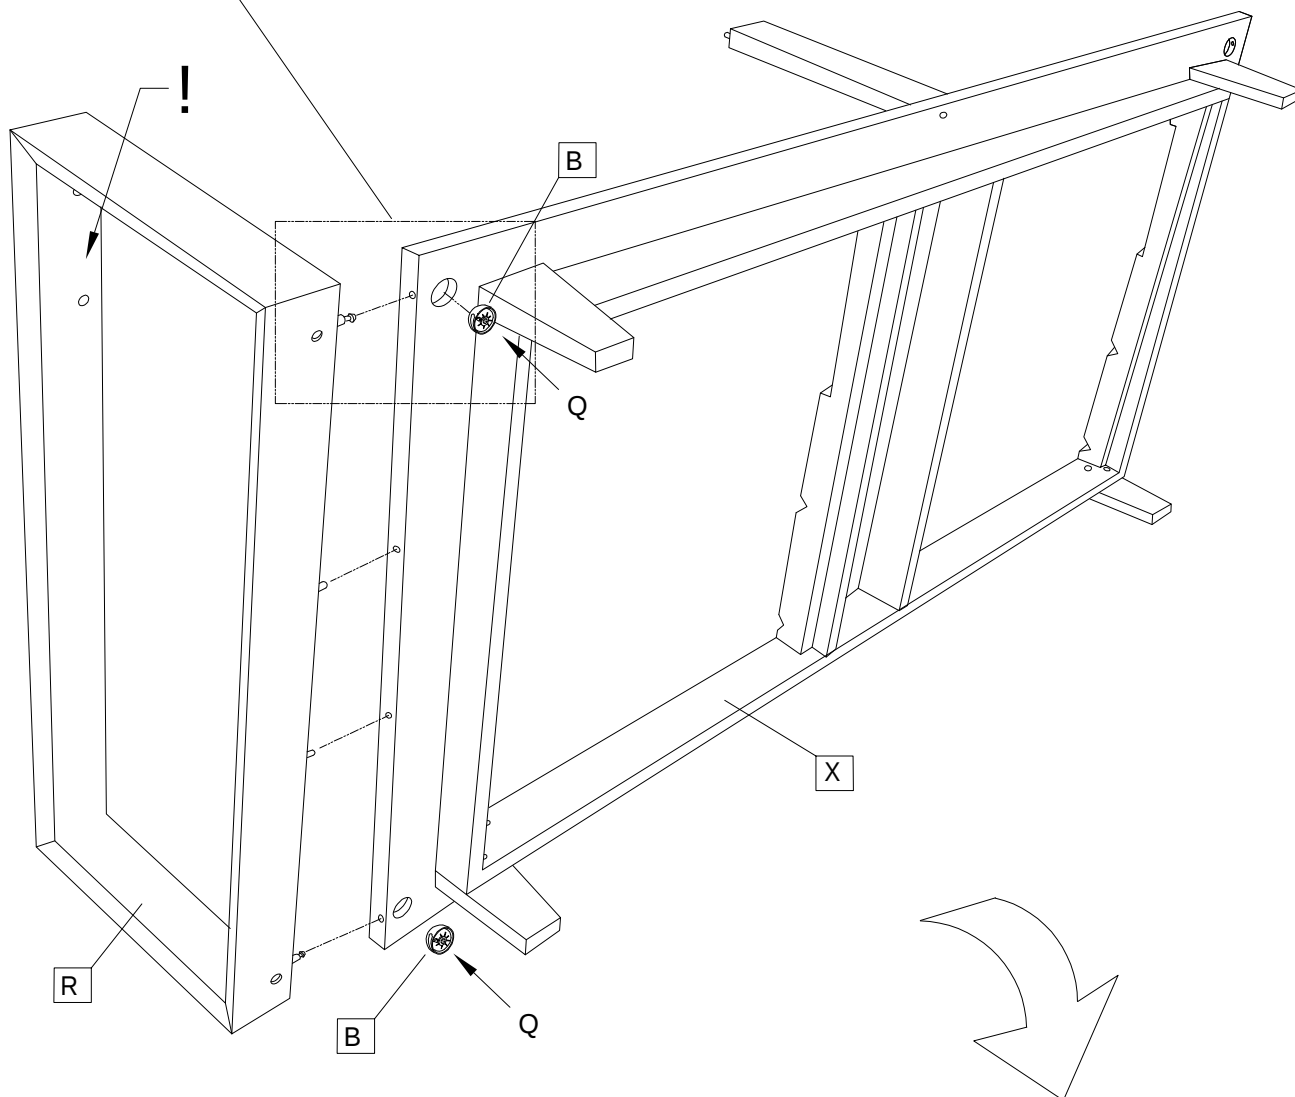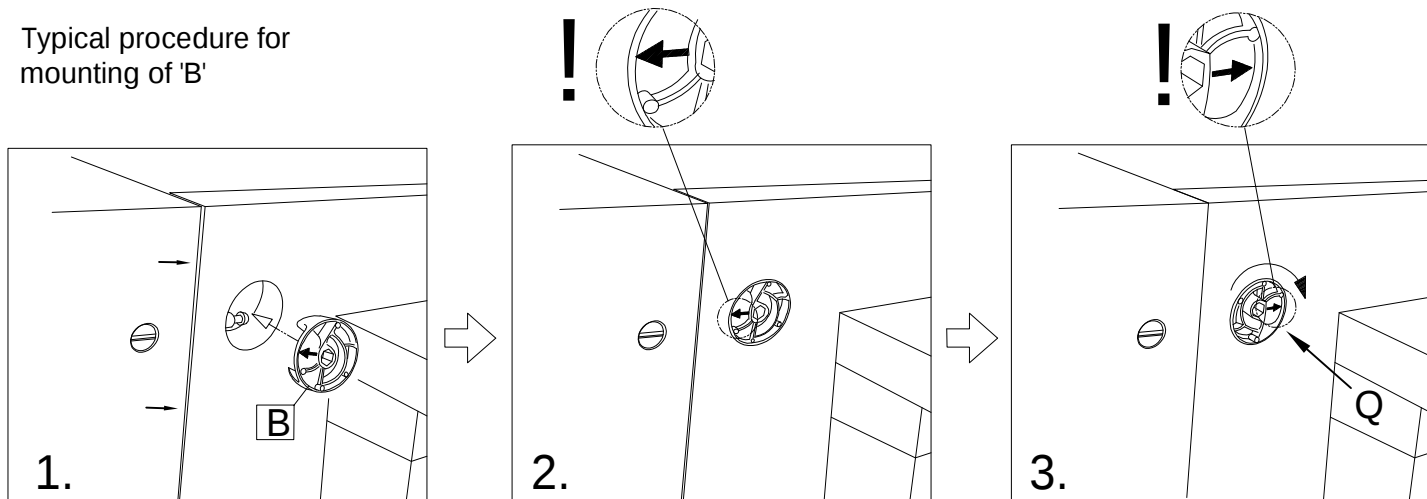


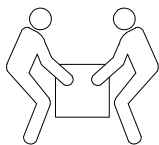


7.



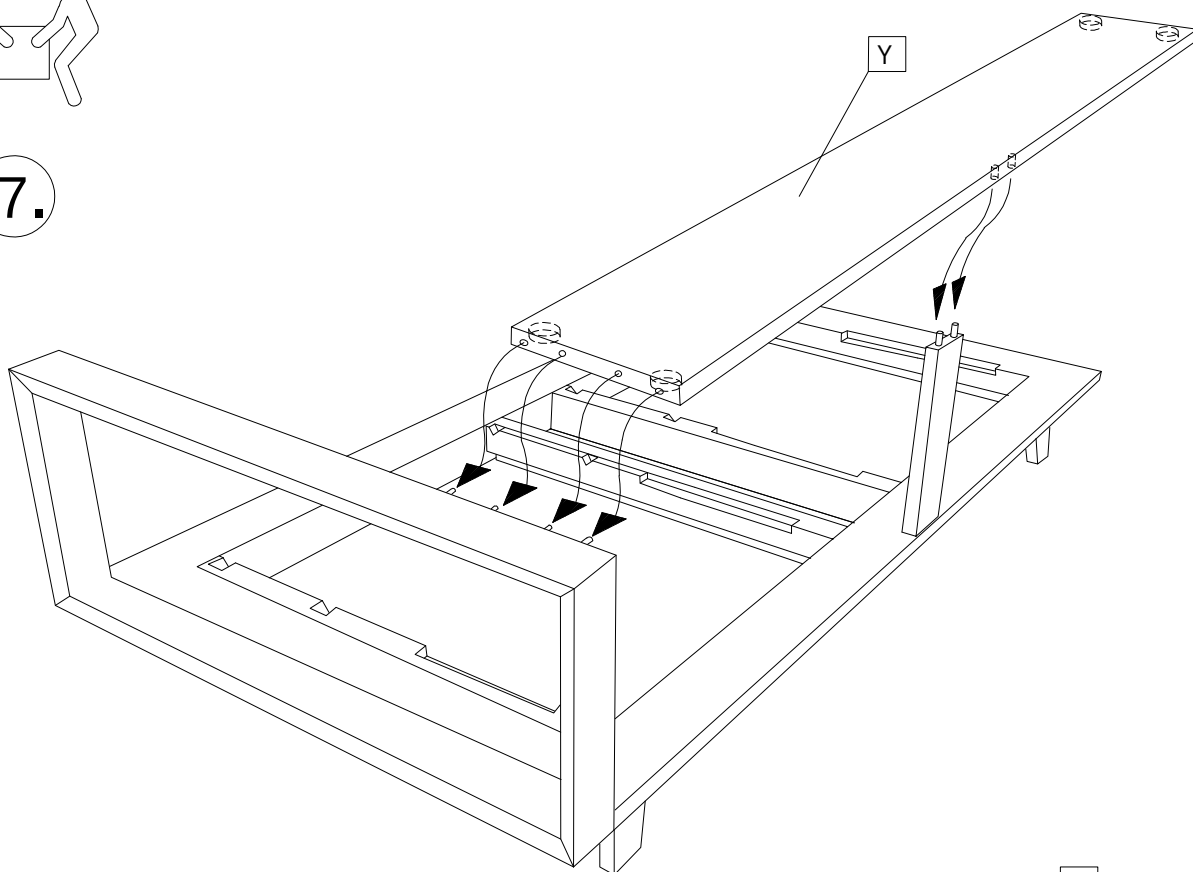


8.


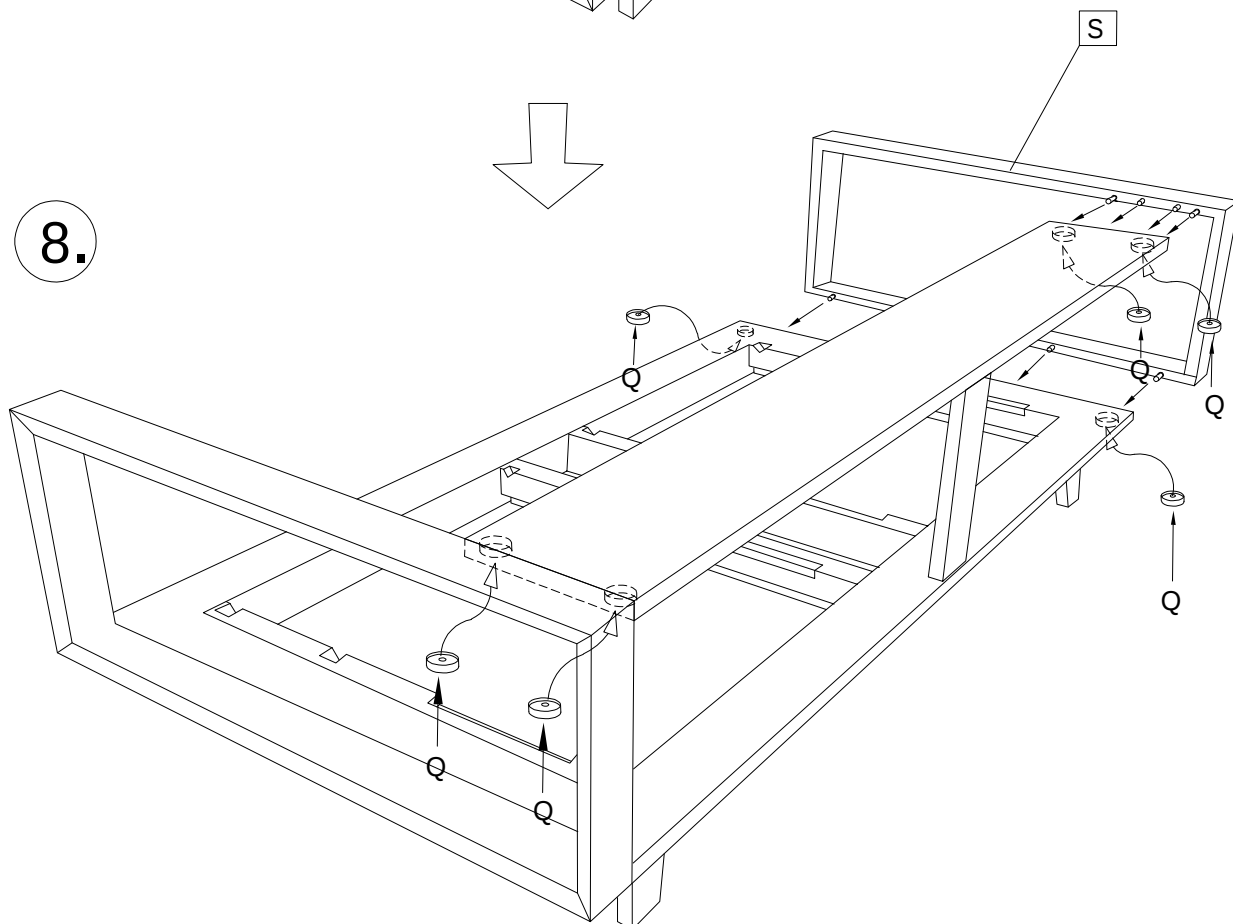


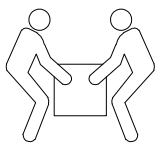



9.

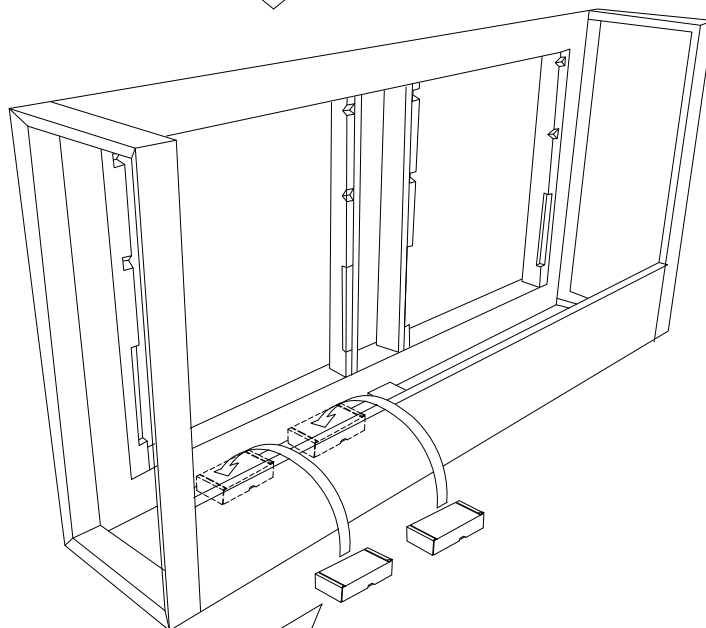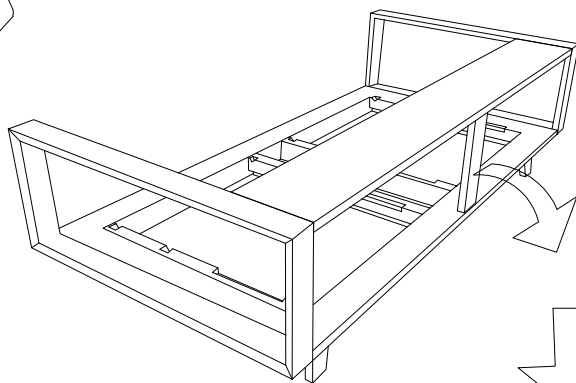


2 x Empty cardboardboxes:

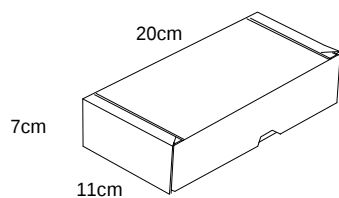


10.

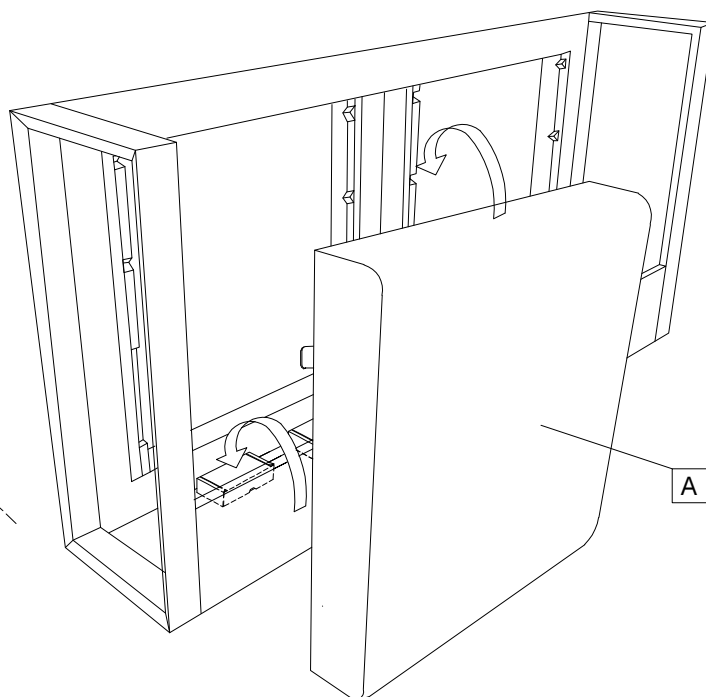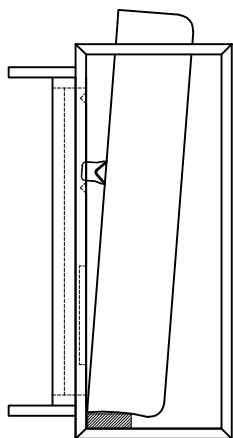

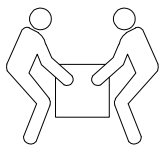

11.

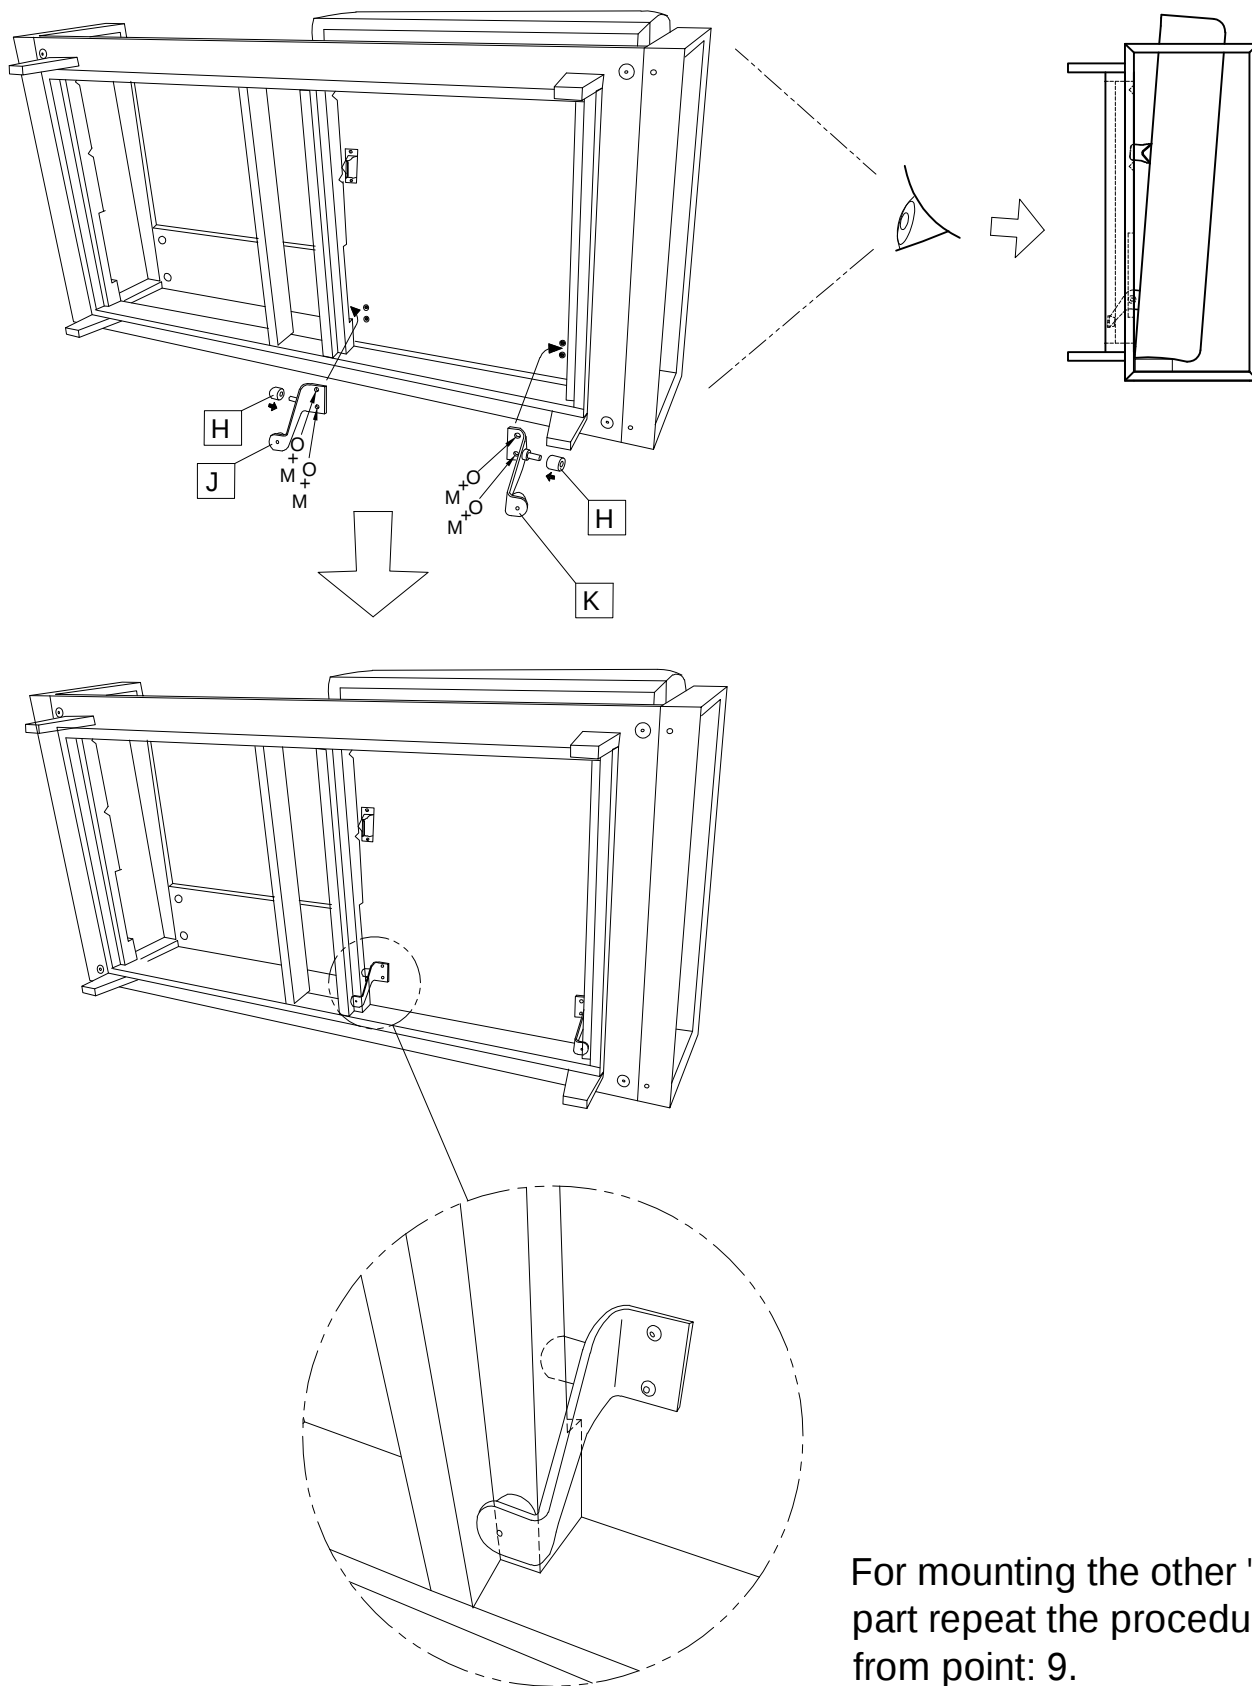

For mounting the other 'A' part repeat the procedure from point: 9.

